HOME DECORATORS COLLECTION

Item # 205975794
Model #WSFP46ECHD-4

ASSEMBLY INSTRUCTIONS

Glynnis 46 inch Media Console Infrared Electric Fireplace in Medium Ash Finish

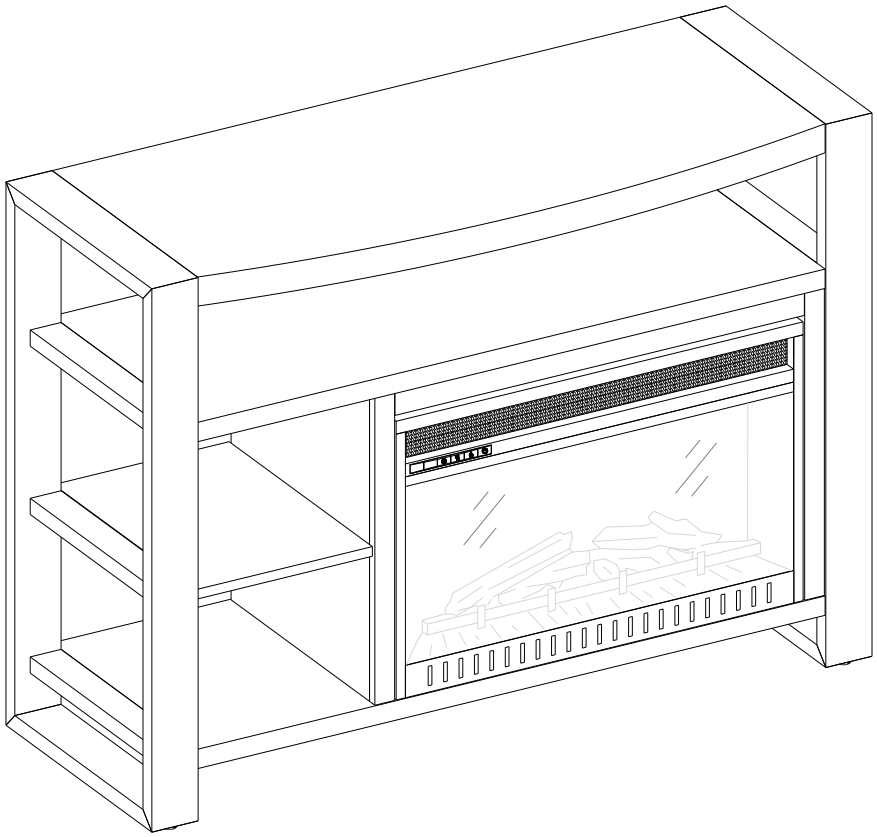

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 6 p.m., EST, Monday-Friday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this fireplace console. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents **2**
Safety Information **2**
Warranty **2**
Pre-Assembly **2**
Planning Assembly 2
Tools required 2
Hardware Included 3
Package Contents 3
Assembly **4**
Care and Maintenance **9**

Safety Information

Please read and understand these instructions before assembling and using this console. Save these instructions for future reference.

MAXIMUM RECOMMENDED WEIGHT LOADS

WARNING: This unit is not intended for use with CRT TVs. Use only with flat panel TVs and audio/video equipment meeting recommended size and weight limits. Never use with larger/heavier than recommended flat panel TVs or equipment. To avoid instability, place flat panel TV in the centre of the unit; the base of the television must be able to rest on the supporting surface of the unit without over-hanging the edges. Improperly positioned flat panel TVs, or flat panel TVs or other equipment that exceed recommended size and weight limits could fall off or break the unit, causing possible serious injury.

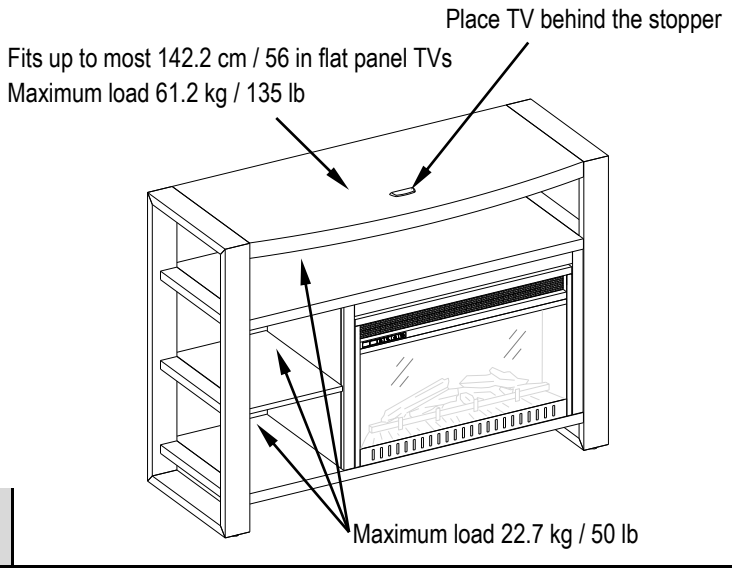

Warranty

We are confident that you will be delighted with this purchase. Should this product be defective in workmanship or materials, or fail under normal use, we will repair or replace it for a period of up to one (1) year from date of purchase.

This warranty gives you specific rights and you may also have other rights which vary from state to state.

Contact the Customer Service Team at 1-800-986-3460 or visit www.HomeDepot.com/homedecorators.

Pre-Assembly

PLANNING ASSEMBLY

Compare all parts with the Hardware Included and Package Contents list. If any part appears missing or damaged, do not assemble this product and contact the Customer Service Team at 1-800-986-3460.

TOOLS REQUIRED

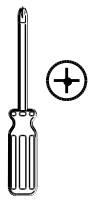

Phillips screwdriver (not provided)

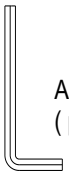

Allen wrench (provided)

Pre-Assembly (continued)

HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.

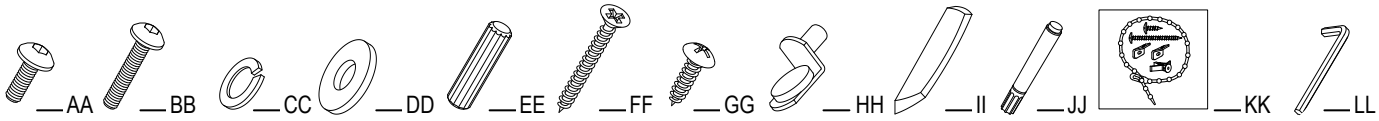

Part	Description	Quantity
AA	Short bolt	20 + 1 extra
BB	Long bolt	5 + 1 extra
CC	Lock washer	24 + 1 extra
DD	Flat washer	24 + 1 extra
EE	Wood dowel	5 + 1 extra
FF	Long screw	2 + 1 extra

Part	Description	Quantity
GG	Short screw	4 + 1 extra
HH	Shelf pin	2 + 1 extra
II	Acrylic stopper	1
JJ	Touch-up pen	1
KK	Tipping restraint hardware kit	1
LL	Allen wrench	2

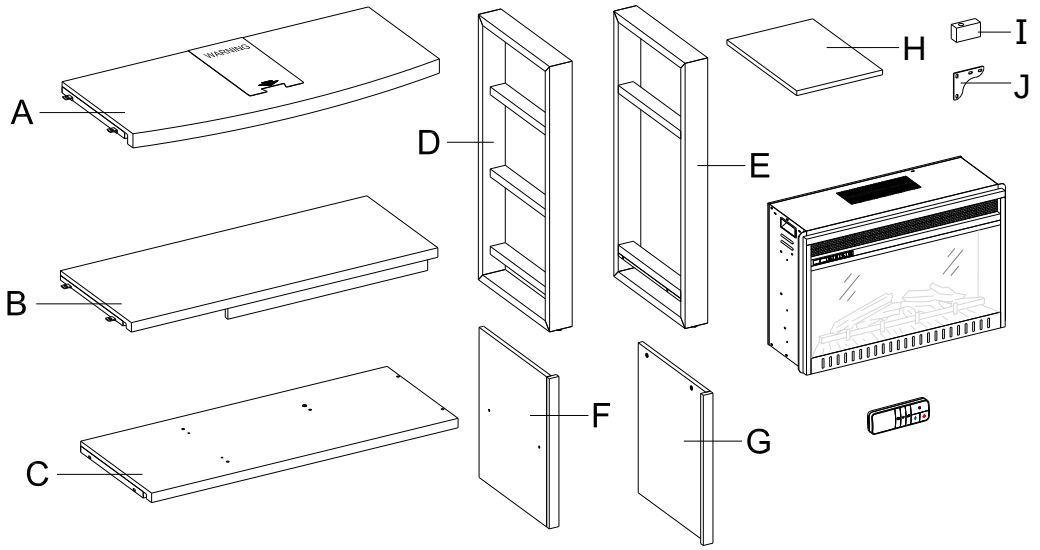

Part	Description	Quantity
A	Top panel	1
B	Center shelf	1
C	Bottom panel	1
D	Left side frame	1
E	Right side frame	1
F	Left partition panel	1
G	Right partition panel	1
H	Removable shelf	1
I	Firebox support	1
J	Metal bracket	2
	Fireplace insert	1
	Remote control with battery	1

Assembly

1 Assembling the center shelf

NOTE: Do not fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

□ Align and attach the center shelf (B) between left and right partition panels (F and G) by using four short bolts (AA) with lock washers (CC) and flat washers (DD) through the metal tabs and screw into place.

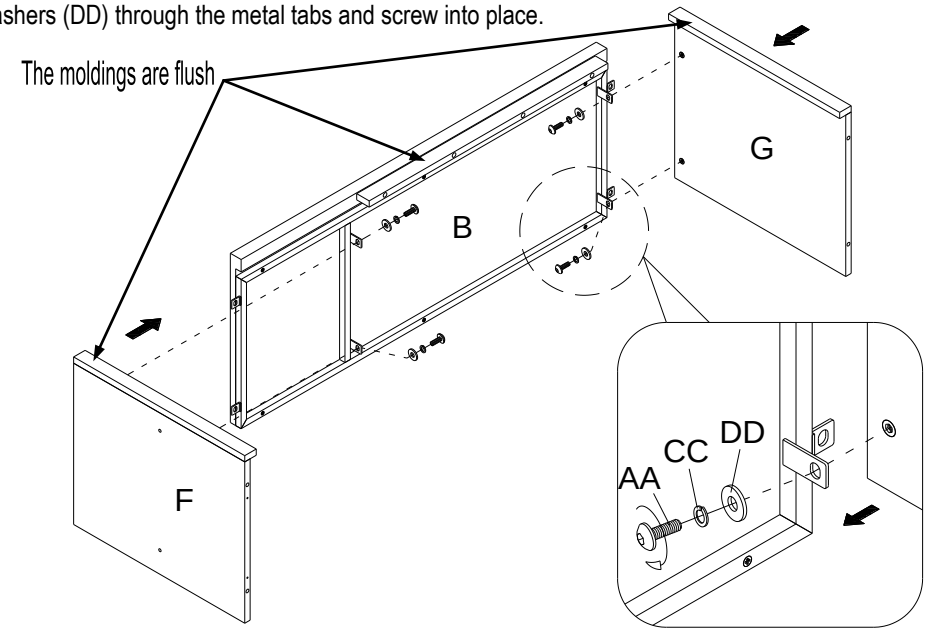

2 Attaching the bottom panel

□ Insert four wood dowels (EE) into the bottom holes of partition panels (F and G).

□ Align and attach the bottom panel (C) onto the inserted wood dowels and fasten it to left partition panel (F) with two long screws (FF).

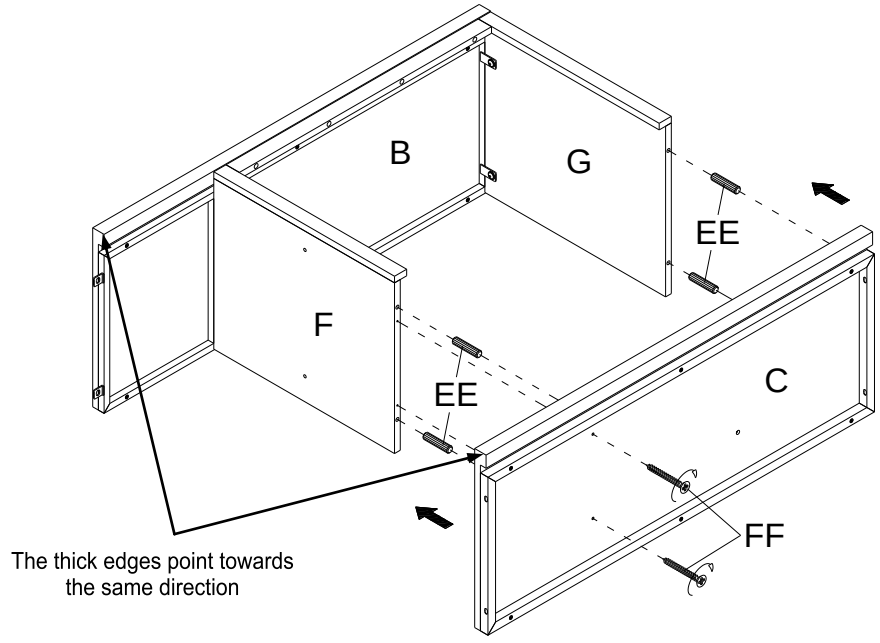

Assembly (continued)

3 Attaching the side frames

- □ Align and attach left side frame (D) to the bottom panel (C) by using two long bolts (BB) with the washers (CC and DD) through the drilled holes on the bottom metal frame and screw into place.
- □ Fasten the center shelf (B) and top panel (A) to the left side frame (D) by inserting four short bolts (AA) and four washers (CC and DD).
- □ Repeat the same procedure to attach right side frame (E) at the opposite side.

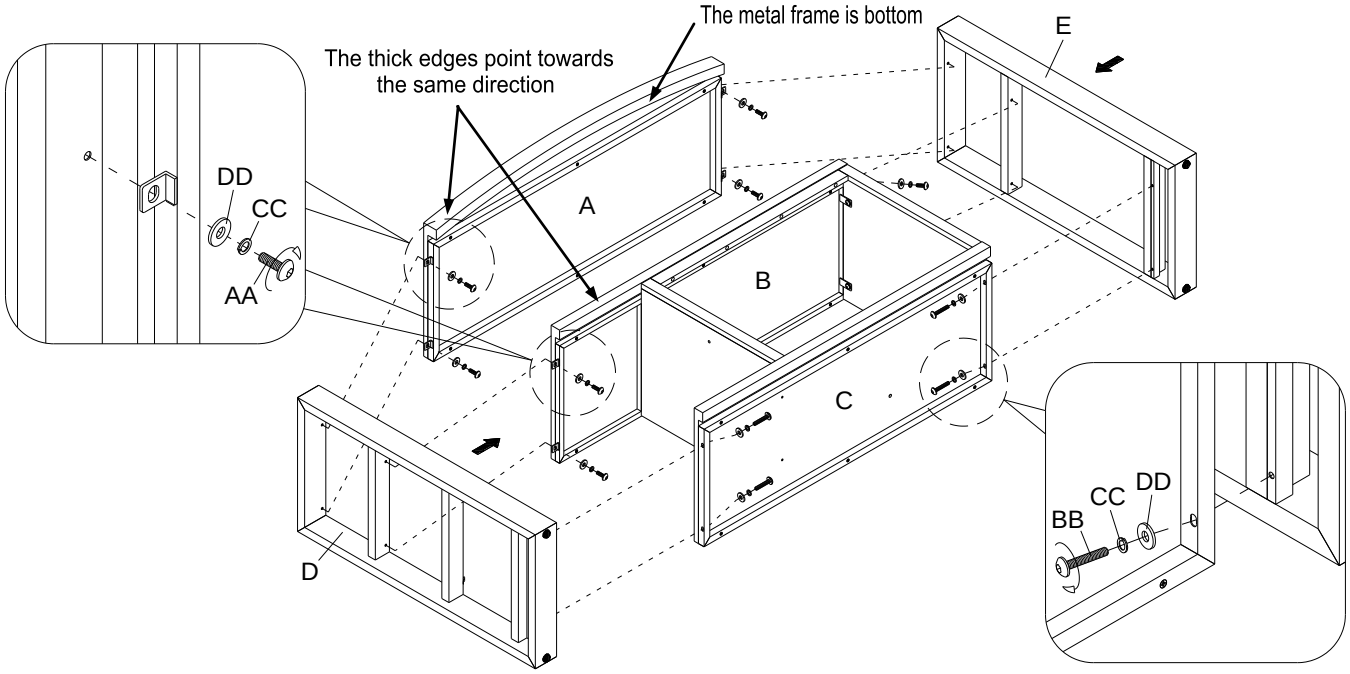

4 Attaching the metal brackets

- □ Fasten two metal brackets (J) to connect the top metal frame (A) with both side frames (D and E), using four short bolts (AA) and four washers (CC and DD) per bracket. As shown.

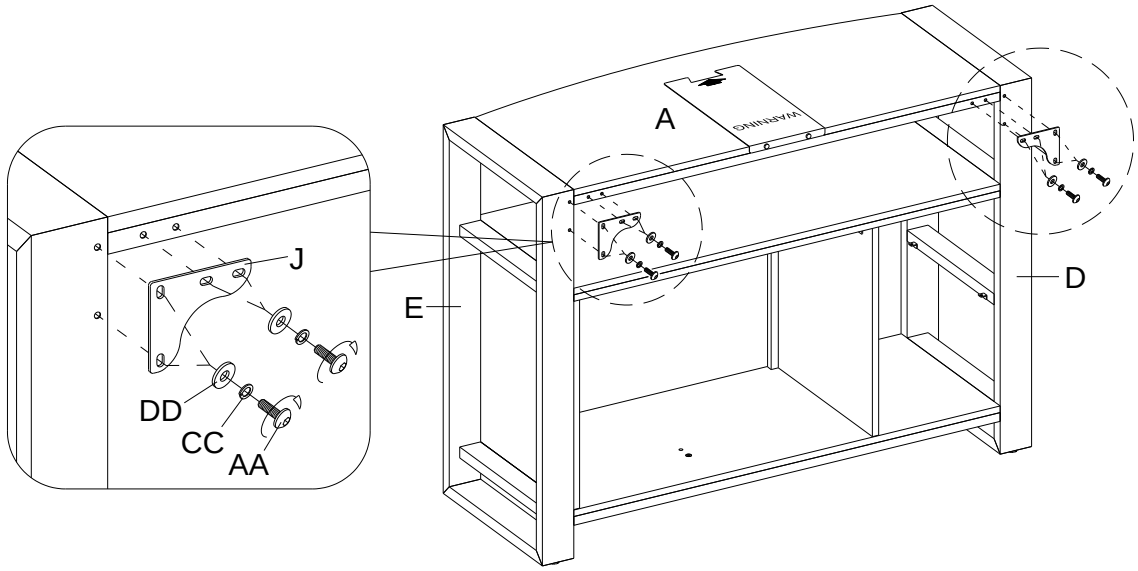

Assembly (continued)

5 Installing the fireplace insert

□ Lift the fireplace insert carefully into the back of the assembled mantel and center it in the opening. DO NOT drag the insert across the bottom panel (C) as it may scratch the unit.

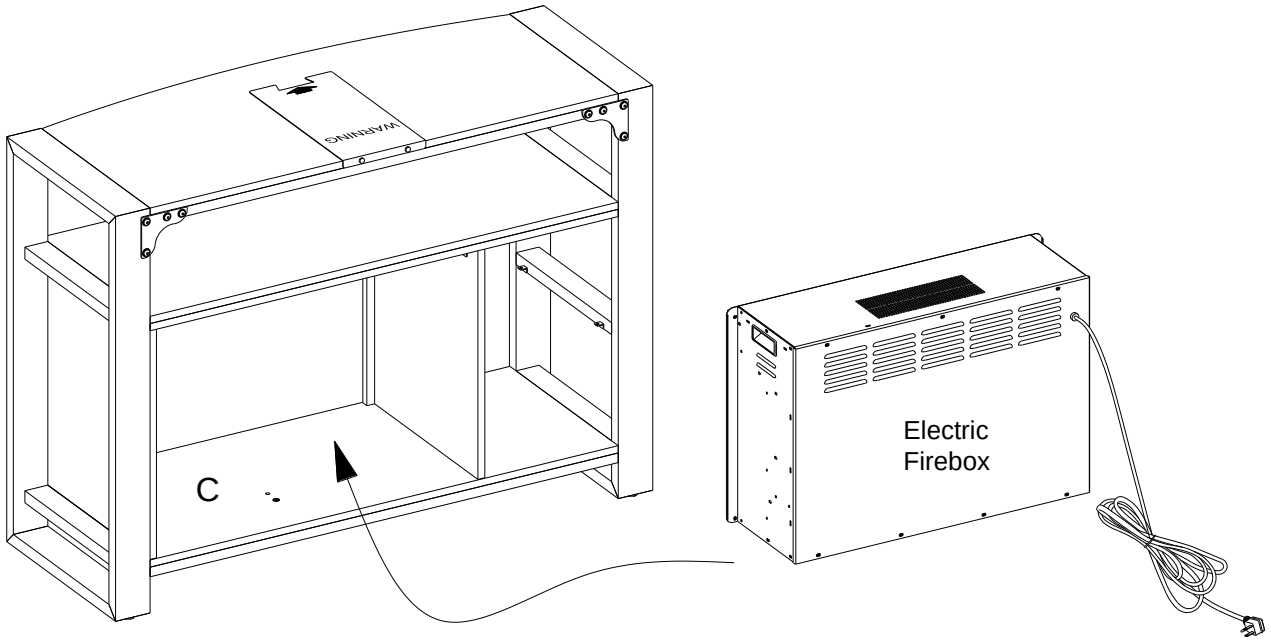

6 Installing the firebox support

□ Attach the firebox support (I) to the bottom panel (C) by using one long bolt (BB) and one wood dowel (EE).

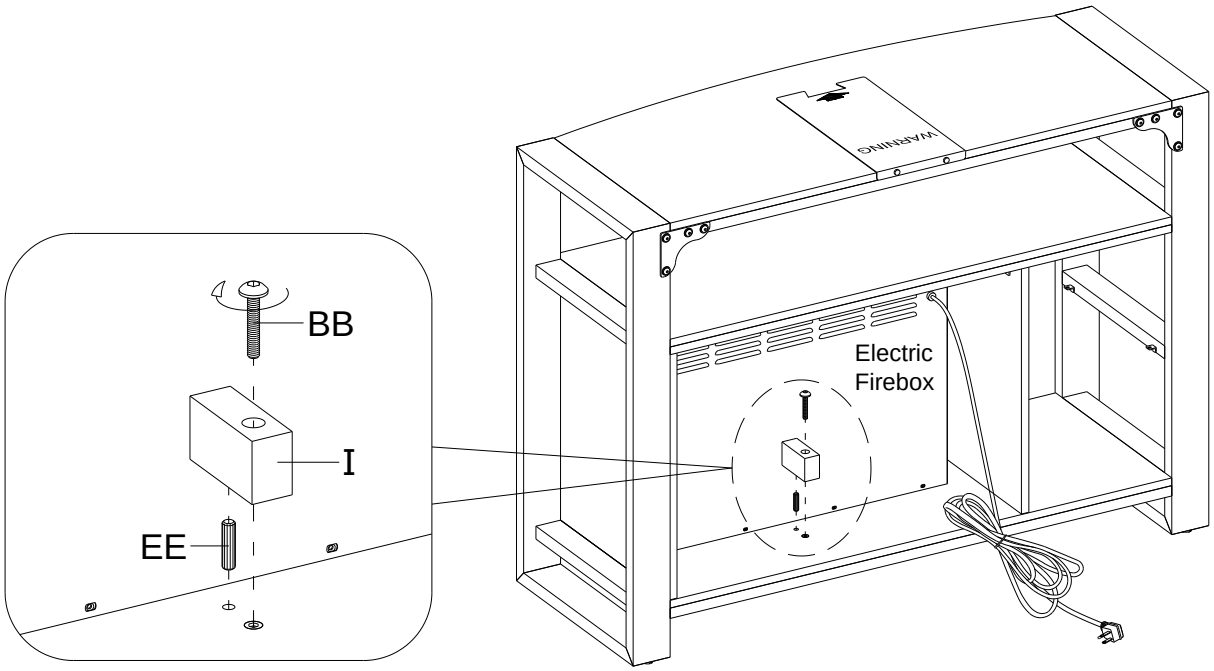

Assembly (continued)

7 Attaching the removable shelf

□ Insert two shelf supports (HH) into the outer holes on left partition panel (F). Tilt and set the removable shelf (H) onto the shelf supports (HH) and the metal brackets on the left side frame (D). Secure the shelf in place with four short wood screws (GG) for extra support.

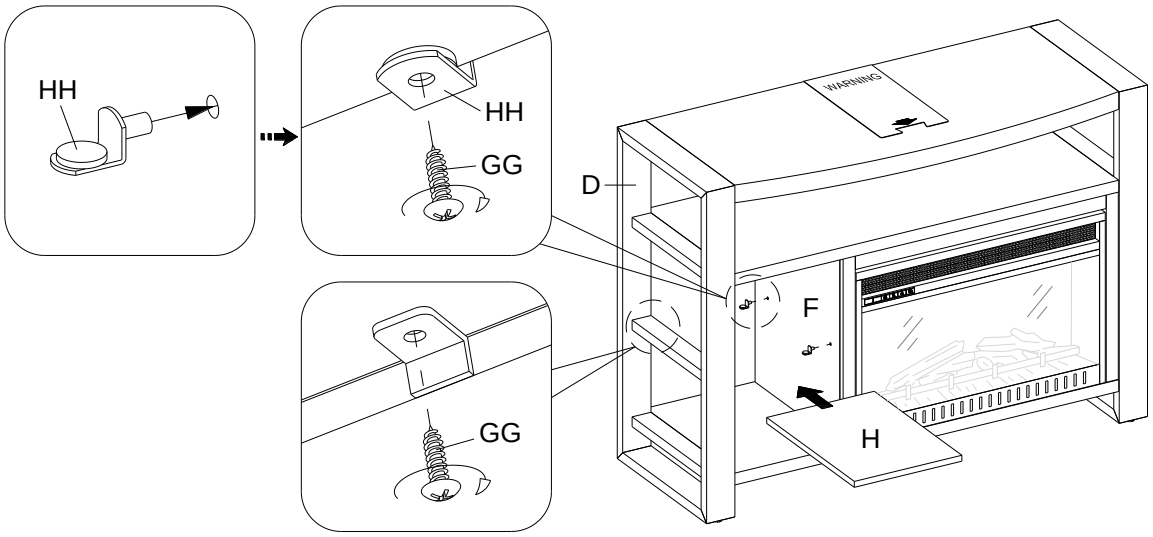

8 Installing the acrylic stopper

□ Remove the paper backing of acrylic stopper (II), then properly align the acrylic stopper into the cut-out on the acrylic stopper template on the front of the top panel (A). Press down on the acrylic stopper to help adhesion.

□ At the back of the top panel (A), carefully unscrew the two thumb tacks to remove the acrylic stopper template.

NOTE: You must install the Acrylic TV Stopper to prevent TV from tipping when placing your flat panel television on the table-top

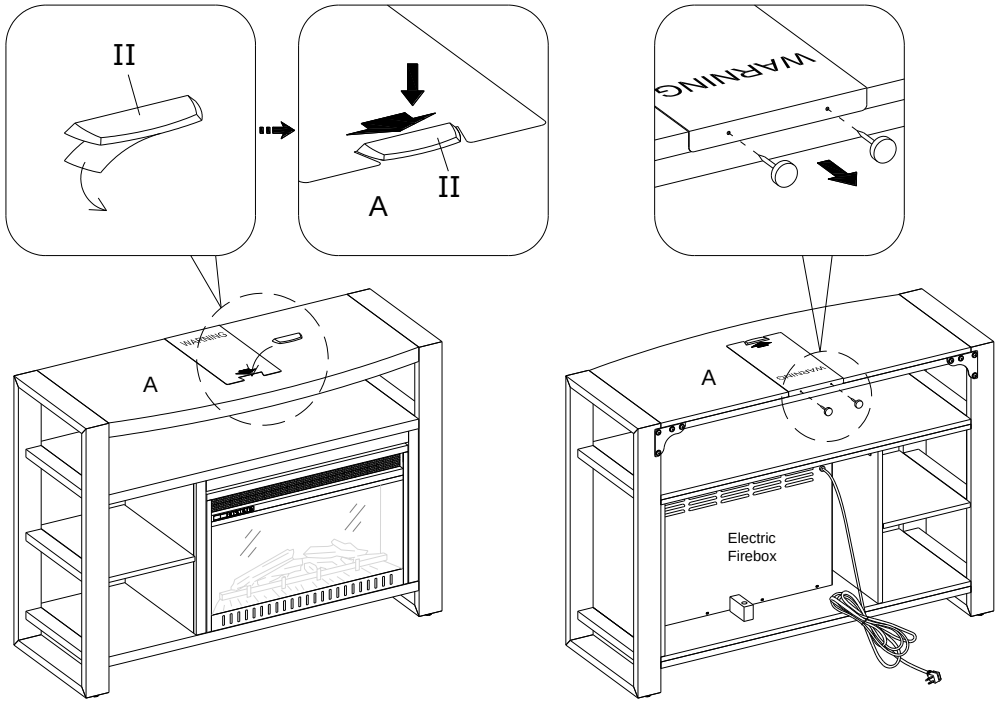

Assembly (continued)

9 Installing the tipping restraint hardware

NOTE: Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

- □ Ask for assistance to position the assembled fireplace at the desired location against a wall. In case of uneven floor, floor levelers are provided at the bottom of the mantel. If necessary, adjust the floor levelers by hand to correct tilting, until the unit is level.
- □ Follow the instructions printed on the plastic bag containing the tipping hardware to attach the tip-over restraint to the unit and the wall.
- □ Connect the fireplace to the power transformer. Follow the operating manual for the electric fireplace insert to control your fireplace.

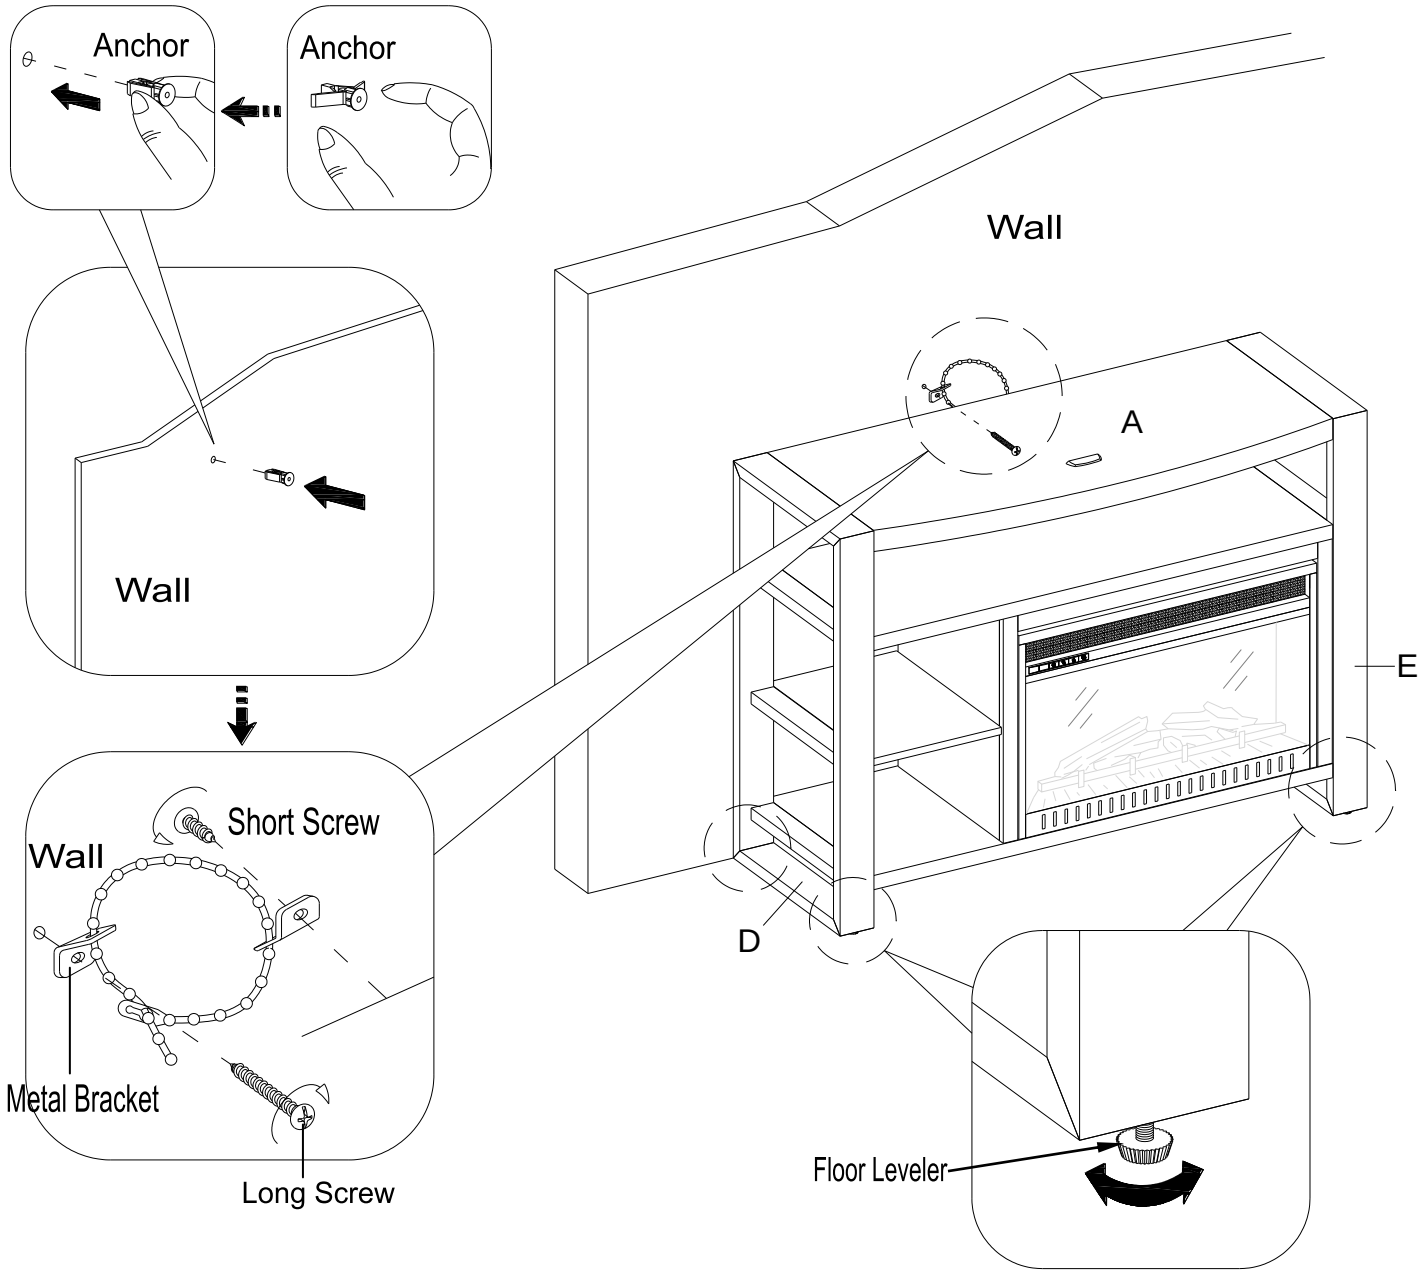

Care and Maintenance

A Touch-up Pen has been provided to repair any small nicks or scratches that may occur during assembly or shipping.

To clean and care for your furniture:

- □ Use a soft, clean cloth that will not scratch the surface when dusting.
- □ Use of furniture polishes is not necessary. Should you choose to use polishes, test first in an inconspicuous area.
- □ Using solvents of any kind on your furniture may damage the finish.
- □ Never use water to clean your furniture as it may cause damage to the finish.
- □ Always use coasters under beverage glasses and flowerpots.
- □ Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.
- □ Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- □ Stains or marks from crayons or ink markers will be difficult to remove.
- □ In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- □ Check bolts/screws periodically and tighten them if necessary.

CARING FOR WOOD FURNITURE

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

CLEANING THE FIREPLACE TRIM

Clean the metal trim using a soft cloth, slightly dampened with citrus oil based product and buff with a clean soft cloth. DO NOT use brass polish or household cleaners as these products will damage the metal trim. Citrus oil based products can be obtained at supermarkets or hardware stores.

HOME
DECORATORS
COLLECTION

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 6 p.m., EST, Monday-Friday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.